

Installation

CONTENTS:

- 1 x 06-920-5R loom
- 1 x 06-015 low level relay
- 1 x Bag of Jack & Fuses
- 1 x SOT-084 for SC Model head units
- 1 x SOT-043 for HU Model head units

INSTALLATION:

- 1) Remove stereo unit and plug the appropriate SOT loom in line to the vehicle wiring.
- 2) Assemble the 06-920-5R loom round the 06-015 relay, Then connect in line to the SOT's power ISO connection. (see note below if you have additional speaker wires in the vehicle)
- 3) Insert fuses in to the appropriate holders (Red=5amp, blue=2amp)
- 4) Connect the 3.5mm jack (or appropriate adaptor) to the audio line bullet connections.
- 5) With phone and kit and standard audio levels (mid way) test the system and adjust the gain wheel on the relay if tonal quality refinement is required.
- 6) Install the remainder of your kit, reinstate the head unit and make a final test.

Troubleshooting Guide

Speakers do not mute:

- Check power to the phone kit, perm, ignition and ground.
- Check mute (yellow wire) goes to ground when call comes through.

Ignition Feed Note:

Because this loom covers a wide time frame of vehicle manufacture, more modern systems will require the attainment of an external ignition supply, please check this is a 12V feed when the car ignition is on. When the key is removed from the ignition the voltage should be 0V.

For any further problems or queries, please contact the cellular technical line
On 01420 476014, or by e-mail on cellular@autoleads.co.uk

NOTE:

If the vehicle is fitted with more speakers than the standard doors, (stereo run tweeters), Then the 8 speaker wires that enter and leave the ISO's of the SOT harness will need to be Bridged to re-enable a direct connection, and the mute of the stereo will need to be triggered to Enable full stereo silence. For more modern HU units that do not have a mute capability, a full Telemute harness (06-043B) will be required to relay out these remaining speakers.




Do not dispose as municipal waste. Reuse or recycle whenever possible. Electrical & Electronic waste may contain substances harmful to the environment. For environmentally sound disposal methods open to you, please contact your local council.
Products marked with the crossed out wheeled bin symbol should not be treated as municipal waste.

Autoleads

06-920B

Volvo 6 Pin Din Amplified Units

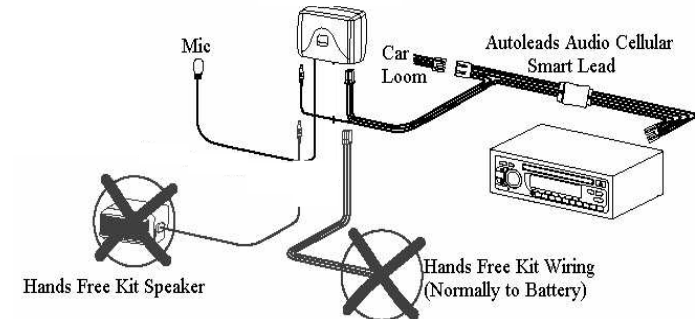

SC805, SC901, HU601, HU603, HU655, HU801, HU803, HU1205

Please read the instructions thoroughly before installing this device. Autoleads will not accept liability for failure of any part of vehicle (including audio system) if the instructions are not adhered to.

06-920B User Guide Ver 1.0. 29/05/08